


SLIDING DOOR INSTALLATION GUIDE


Screws & fittings we supply:

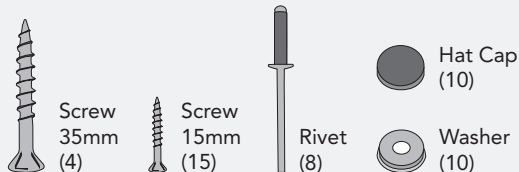

Tools you will need:

- Cordless Screwdriver
- Rivet Gun (if riveting tracks)
- Drop Saw or Hack Saw (if trimming aluminium)
- Jig Saw (if trimming timber batten)
- Glue, Liquid Nails or Silicone

- (1) Trim timber batten and aluminium tracks if necessary
- (2) Fix flat jambs into walls or reveals using 15mm screws, use adhesive as an extra precaution
- (3) Wedge timber batten between the jambs, adhesive can be used here as well to secure to the ground, fix using 35mm screws
- (4) Place bottom track over timber batten. Track can be riveted to the side jambs, from the back and front.
- (5) Insert the top track. Fix to the ceiling or top reveal using 15mm screws. Rivet to the jambs from the front and back.

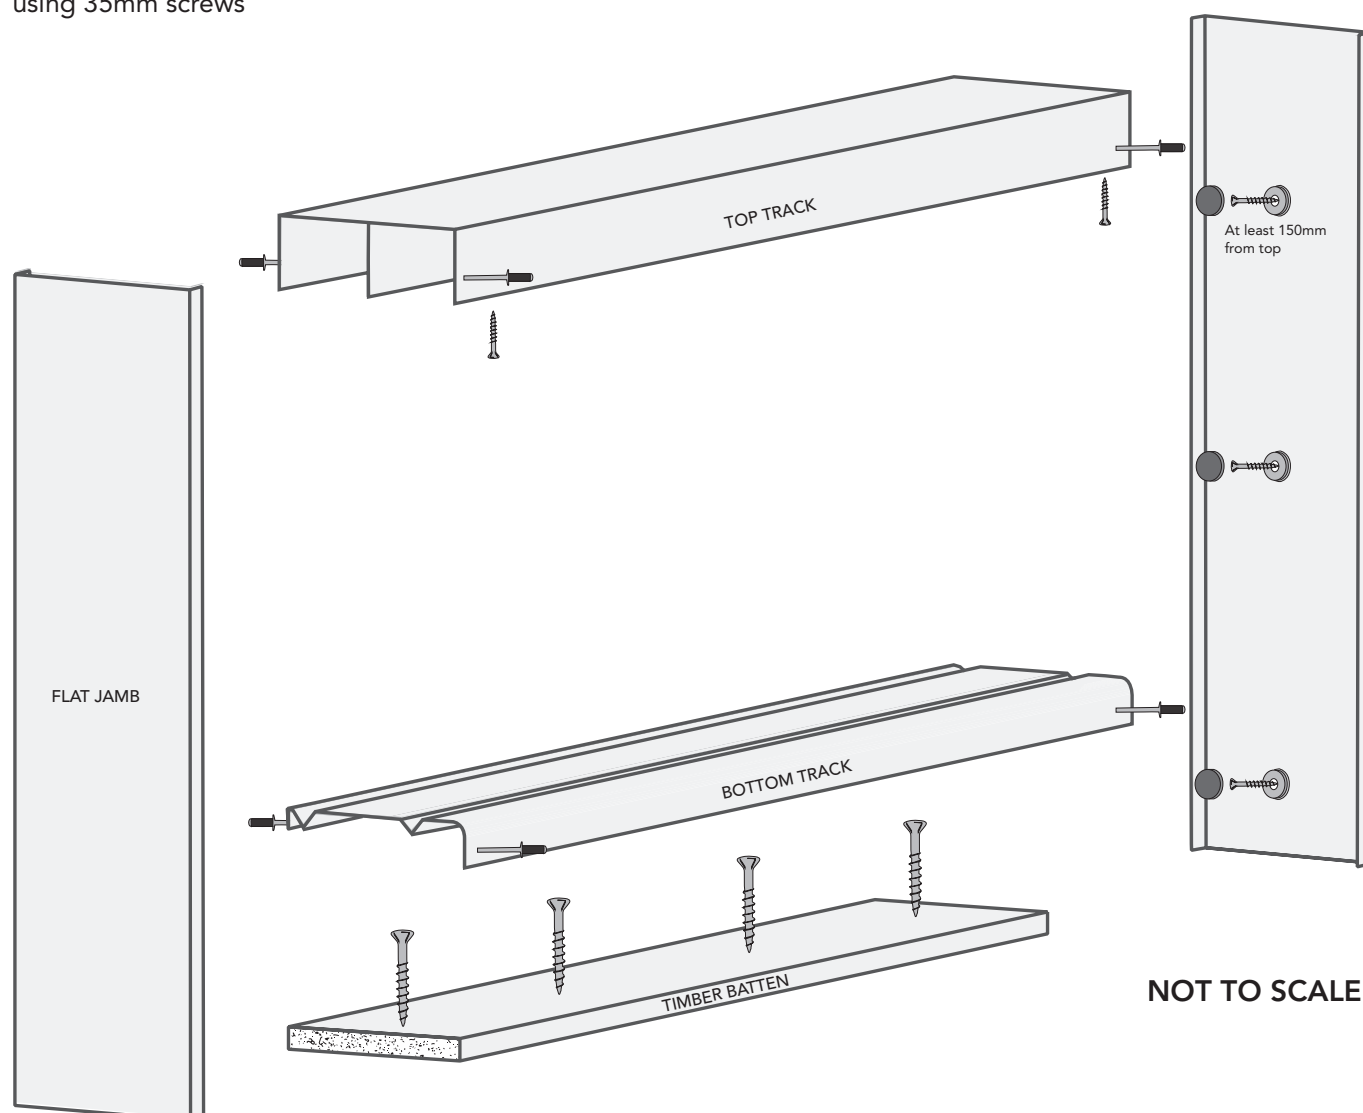

NOT TO SCALE